



Easy Conversion Chart: BE3-81O, 81U, 81O/U, 81OT, 81UT, 81OT/UT To ES-81O, 81U, 81O/U

This simple chart is designed to help you choose the appropriate ES style configuration with the same minimum coverage as your BE3. Just match up the color-coded option boxes on the left with those on the right. Option boxes colored black require no selection. For reference, see the product specification style charts on Page 2. For assistance, contact technical support at 618-654-2341.

Enter your BE3 style configuration below to generate new ES style configuration

	From	BE3 Style Configuration		To	ES Style Configuration
BE3	Model Number	81O 81OT 81U 81UT 81O/U 81OT/UT		Model Number	81O 81O 81U 81U 81U 81O/U 81O/U
	Sensing Input Type	1		Sensing Input Type	1
	Nominal Input Type	A B C D S ¹		Nominal Input Type	A C D F S ¹
	Frequency	2 ² 3 4		Frequency	na ² 2 3
	External Power	N ³		External Power	N ³
	Output Type	1 2 3		Option 1	0 2
				Option 2	N A ⁵
				Option 3	0

➔

Enter your current BE3 configuration:

BE3	1		N		
------------	---	--	---	--	--

ES	1		N	N	0
-----------	---	--	---	---	---

- 1 For other nominal voltages, contact Basler Electric.
- 2 Frequency must be 50 or 60 Hz for ES. 400 Hz units not available.
- 3 External Power is not required for ES. No selection necessary.
- 4 If Timing selection is A, then Option 1 selection must be 2. If Timing selection B, then Option 1 selection must be 0.
- 5 Option 2 selection A not available.
- 6 ES-81O, 81U, 81O/U wiring terminals are in identical pin-out positions as previous BE3 wiring terminals. Connection diagrams are shown on Page 3 and in Instruction Manual 9500100996.

