



NOTE: DASHED LINES ARE WIRING PROVIDED BY OTHERS

- EXCITER START/STOP CONTACT
- SET POINT RAISE CONTACT
- SET POINT LOWER CONTACT
- AVR/FCR SELECT
- VAR/PF ENABLE
- ALARM RESET