



- NOTES:
- 1 PHASE SEQUENCE: A,B,C.
 - 2 ITEM NOT SUPPLIED BY BASLER.
 - 3 3PH SENSING CONFIGURATION SHOWN.
 - 4 CONFIGURABLE FOR SINGLE AND THREE PHASE.
 - 5 INPUT VOLTAGE SHOULD BE CHOSEN TO MATCH FIELD VOLTAGE REQUIREMENTS. SEE DECS-150 INSTRUCTION MANUAL FOR ADDITIONAL INFORMATION.
 - 6 CTS ARE 1A OR 5A SECONDARY AS INDICATED BY THE STYLE NUMBER OF SMC-150