



Sample Style Configuration Conversion

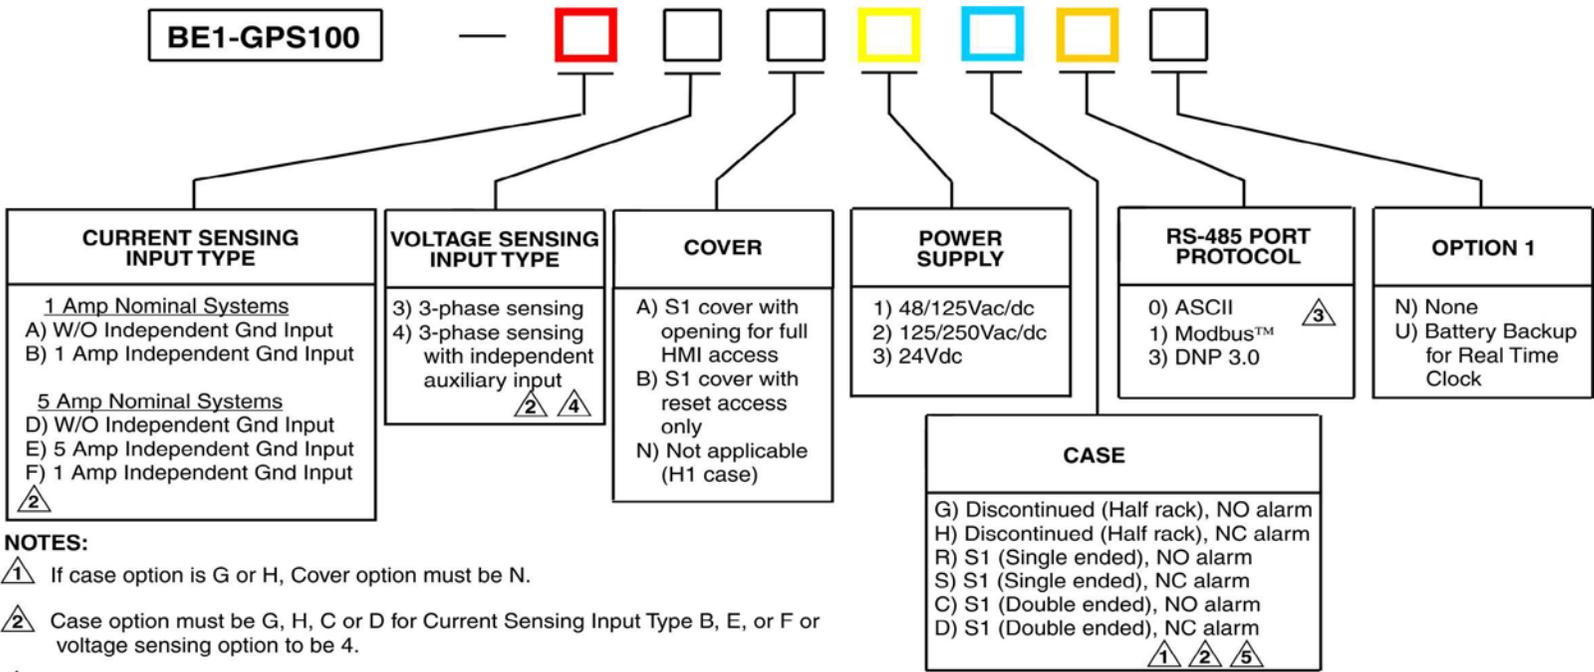

- NOTES:**
- ⚠️ 1 If case option is G or H, Cover option must be N.
 - ⚠️ 2 Case option must be G, H, C or D for Current Sensing Input Type B, E, or F or voltage sensing option to be 4.
 - ⚠️ 3 ASCII communication is standard on Com0 (front RS-232) and Com1 (rear RS-232) ports.
 - ⚠️ 4 Aux VT input adds 25 Sync-Check option (case option G, H, C or D).
 - ⚠️ 5 Case options G and H are no longer available.

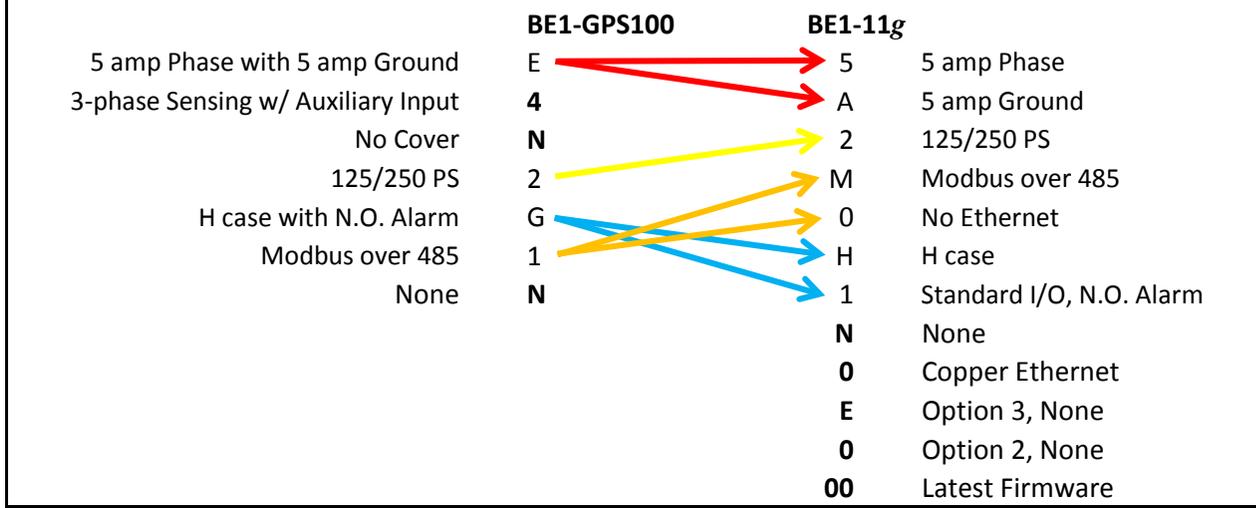