



- NOTES:
- ⚠ PHASE SEQUENCE: A,B,C.
 - ⚠ ITEM NOT SUPPLIED BY BASLER.
 - ⚠ 3PH SENSING CONFIGURATION SHOWN.
 - ⚠ CONFIGURABLE FOR SINGLE AND THREE PHASE.
 - ⚠ INPUT VOLTAGE SHOULD BE CHOSEN TO MATCH FIELD VOLTAGE REQUIREMENTS. SEE DECS_250 INSTRUCTION MANUAL FOR ADDITIONAL INFORMATION.
 - ⚠ CTS ARE 1A OR 5A SECONDARY AS INDICATED BY THE STYLE NO. OF DECS 250 & BE1-11m
 - ⚠ SET FCR/PRE-POSITION FOR DESIRED MOTOR STARTING FIELD CURRENT LEVEL.
 - ⚠ DECS 250 SOFTWARE PROGRAM FOR SYNC-MOTOR EXCITER SYSTEM P.N.9469700009 SHOWN
 - ⚠ ETHERNET CONNECTION PORT LOCATED ON RIGHT SIDE OF DECS 250.
 - ⚠ USB PORT LOCATED ON FRONT PANEL OF DECS 250 & BE1-11m
 - ⚠ RS232 PORT LOCATED ON RIGHT SIDE OF DECS 250

